 


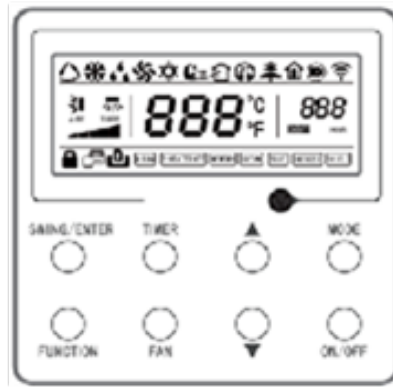

XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.

Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM09XFDI

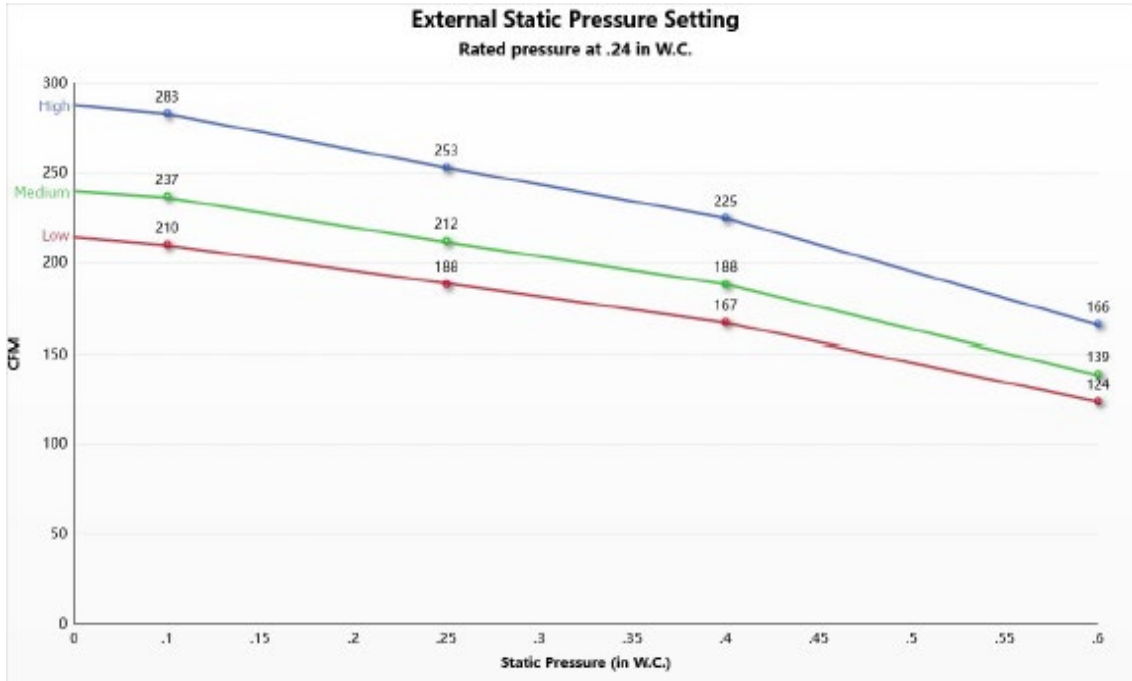

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0	0,8	0,16	0,24	0,32	0,4	0,48	0,6



XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.

Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM12XFDI

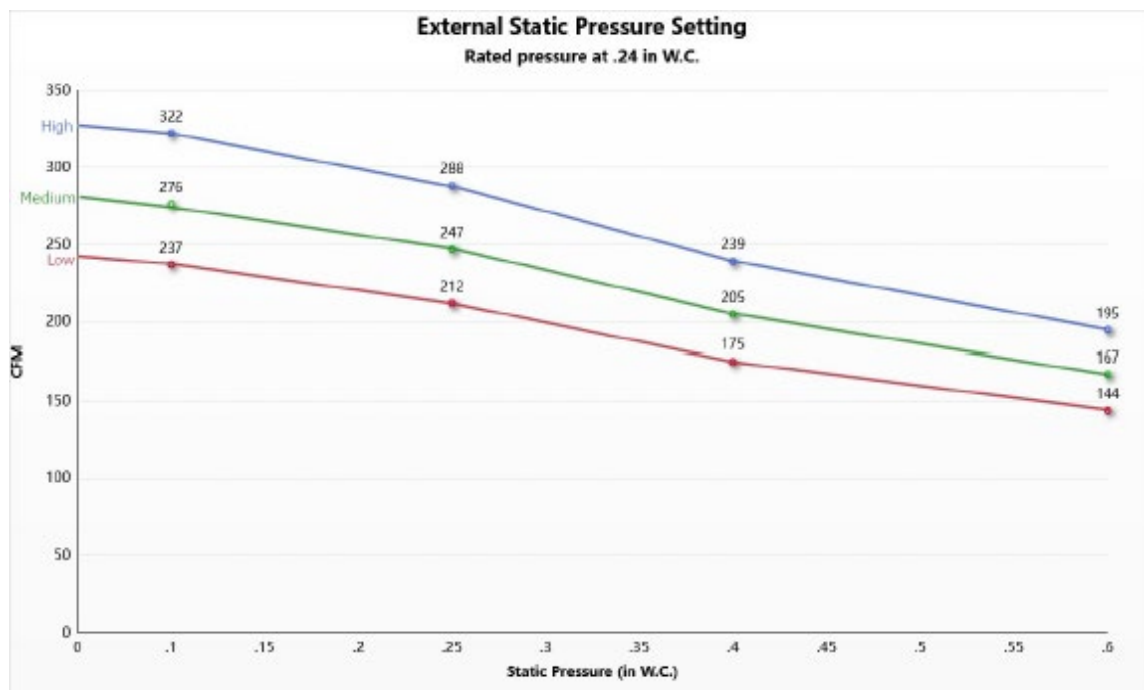

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0	0,8	0,16	0,24	0,32	0,4	0,48	0,6



XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.


Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM18XFDI

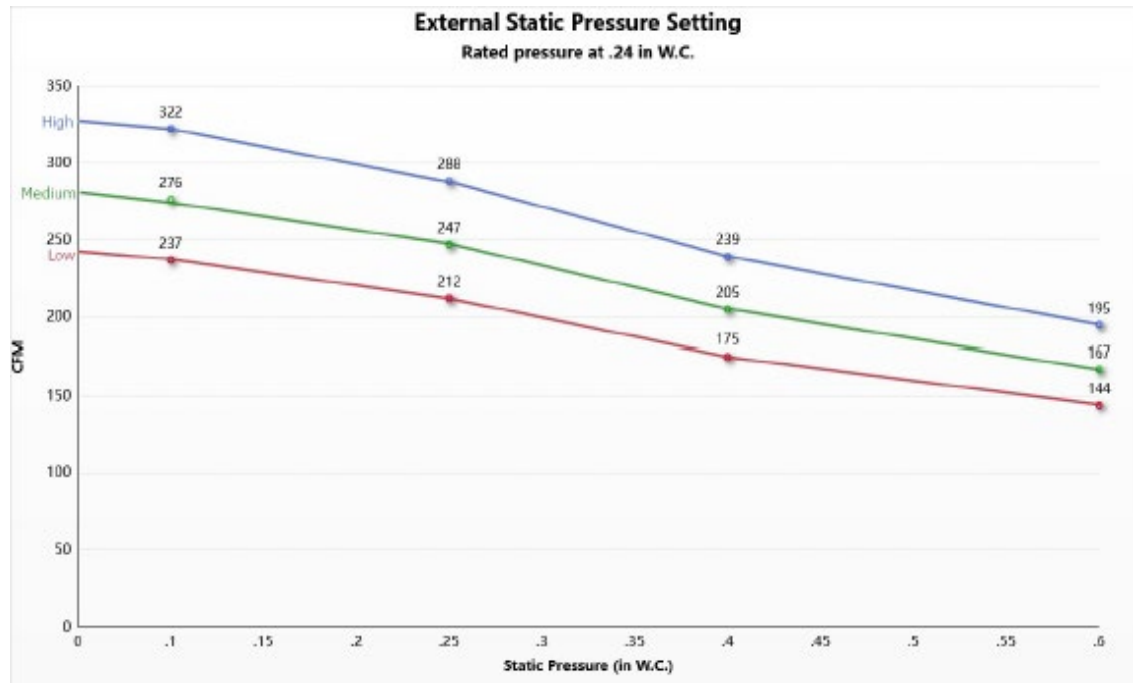

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0	0,12	0,24	0,36	0,48	0,6	0,72	0,8

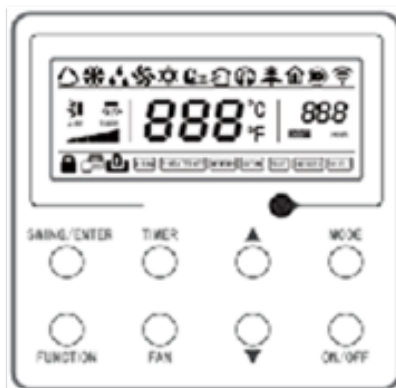

XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.

Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM21XFDI

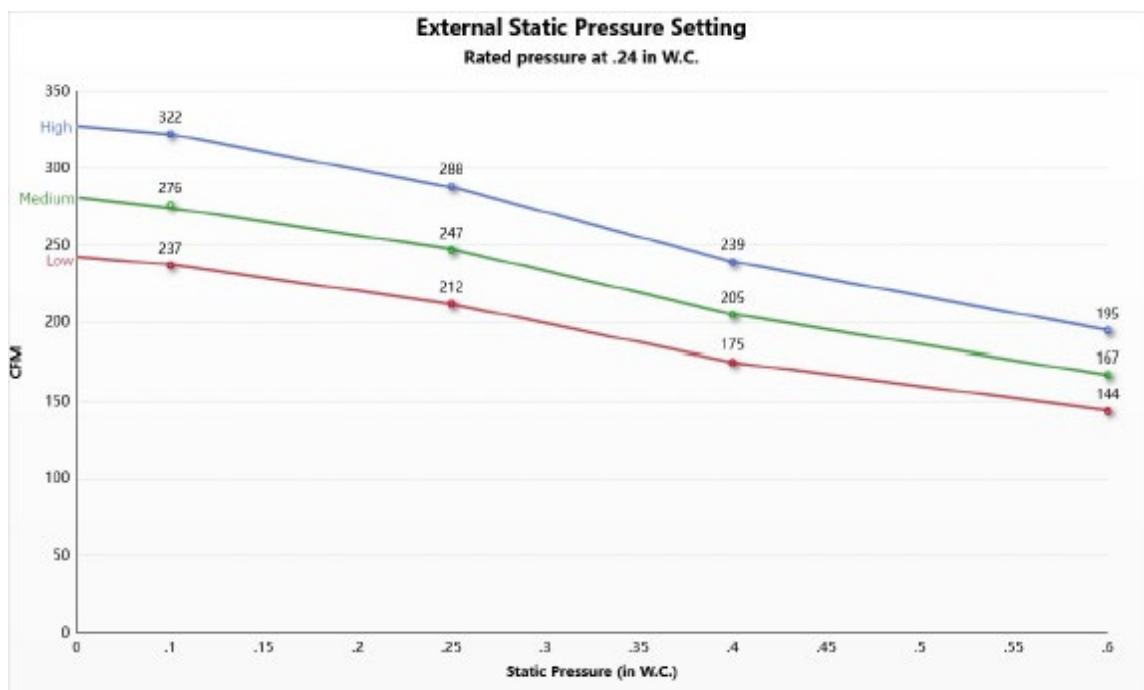

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0	0,12	0,24	0,36	0,48	0,6	0,72	0,8



XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.


Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM24XFDI

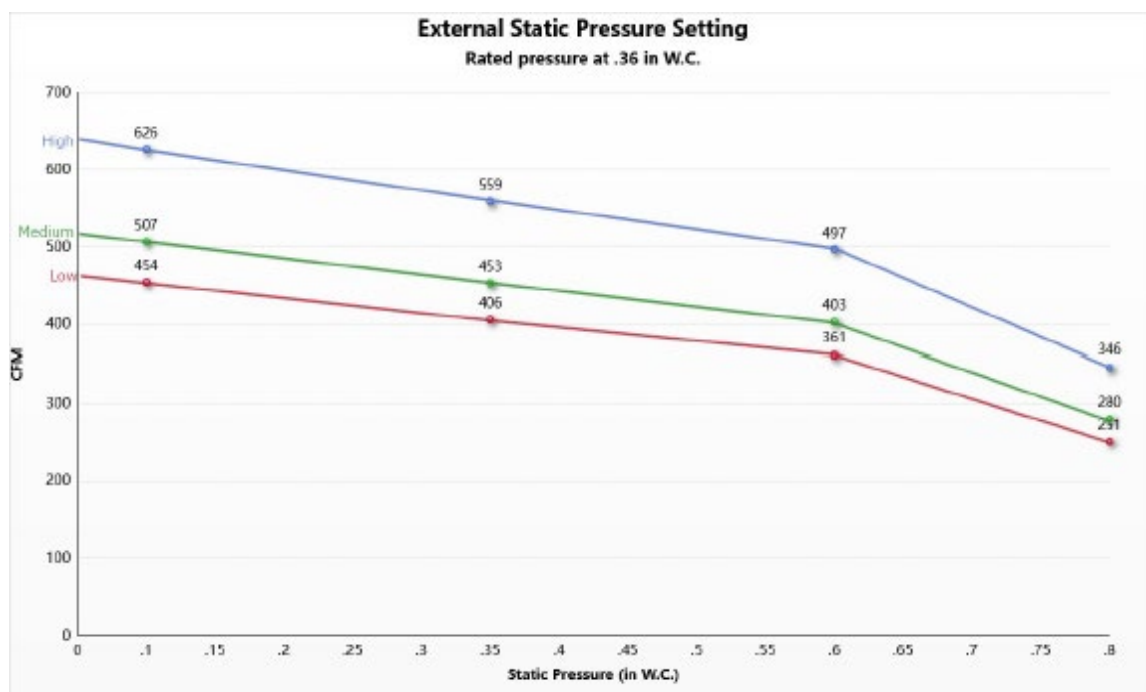

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0	0,12	0,24	0,36	0,48	0,6	0,72	0,8

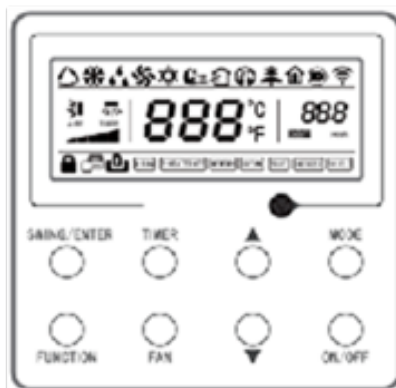

XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.


Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM30XFDI

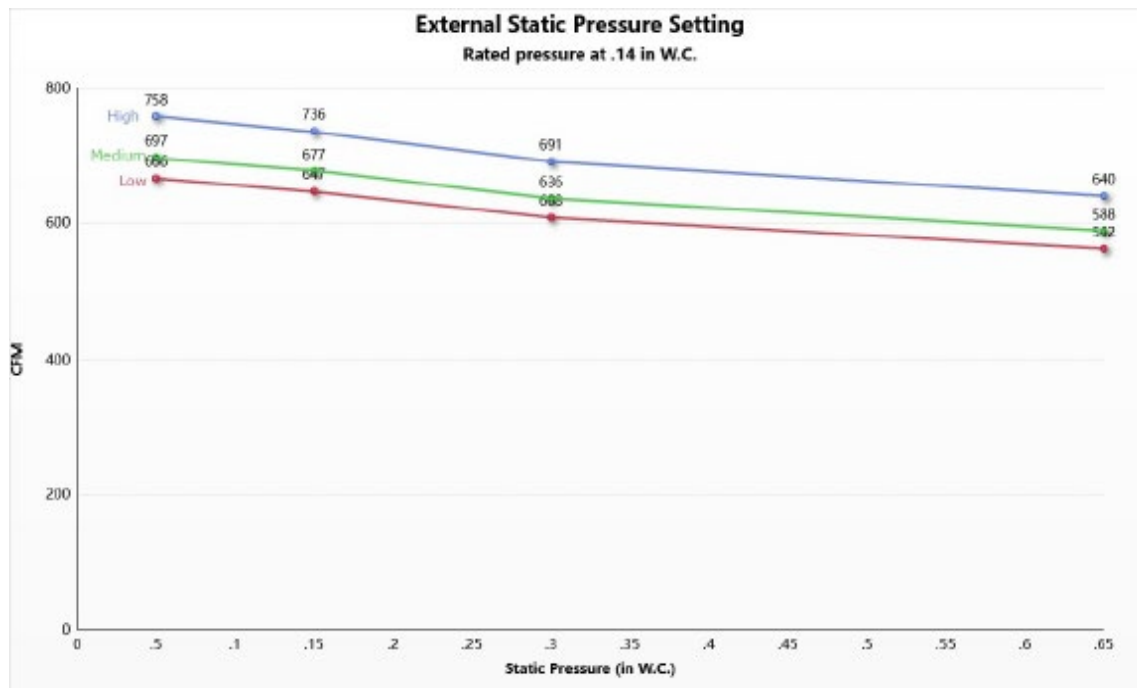

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0,04	0,06	0,1	0,14	0,2	0,3	0,4	0,64

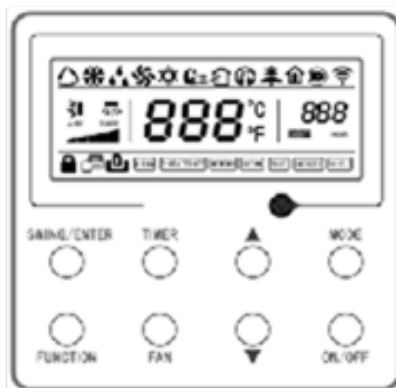

XE72-44/E Controller

How to set the XE72-44E controller

Press and hold function timer until the screen changes to 00 with a 01 on the right side.


Press mode until you see 02 in the middle (default 05)

Use the up and down arrows to change the static notch according to external static pressure.

Hit mode again to save the selected setting. when you are done press swing/enter.

R32

KM36XFDI

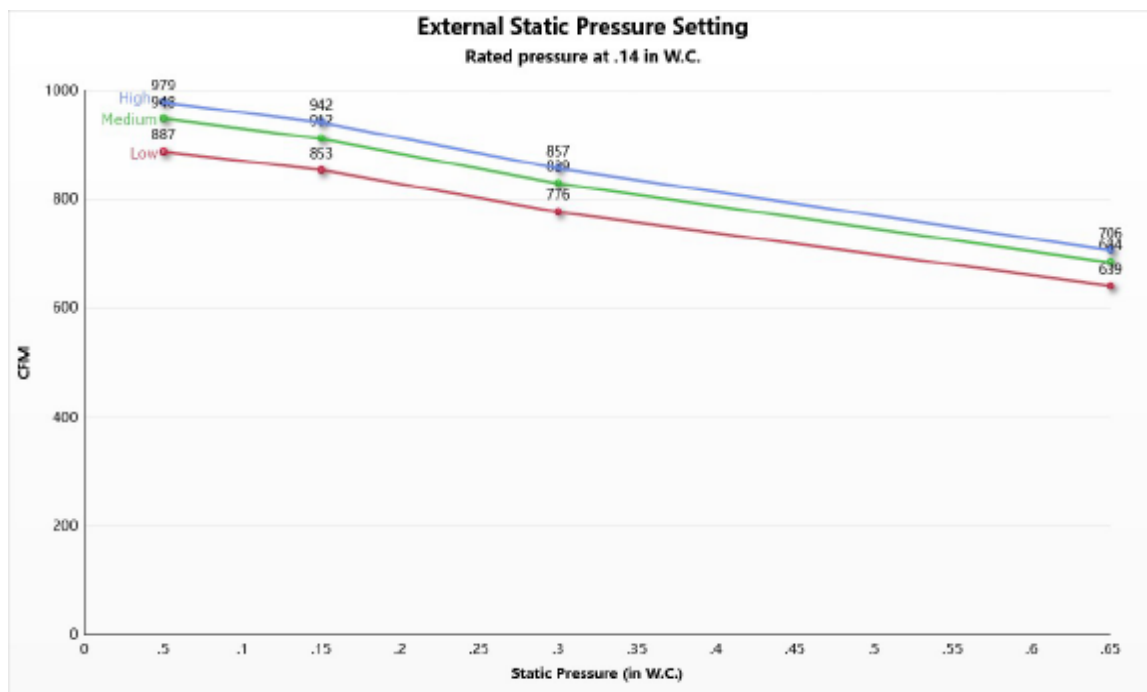

Static pressure notch for indoor fan	2	3	4	5	6	7	8	9
External static pressure (in W.C.)	0,04	0,06	0,1	0,14	0,2	0,3	0,4	0,64